
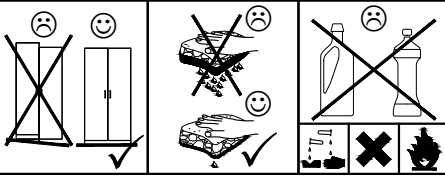


Montageanleitung

Clara 16, 5trg. 1SKV

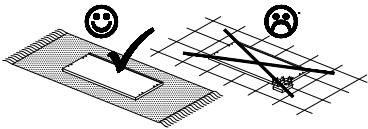

DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

EN - Caution



Follow carefully the assembling instructions described in the directions.

FR - Sécurité


Respecter les instructions de montage décrites dans la notice.


NL - Veiligheid

De in de Gebruiksaanwijzing beschreven Instructies respecteren.






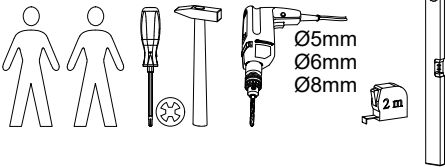





4x EX	4x VB
12x VBS	6x ADK-VBS
1x ADK-5	20x BT
11x TB26-0	11x KP0-26
23x SP1	6x NG
6x GLD-128	12x RWS27
50x NA	1x WBF
1x NH	2x TS4
2x MS9	1x LM
2x SKS2	4x ES11
6x RWS15	1x TS
2x SB	




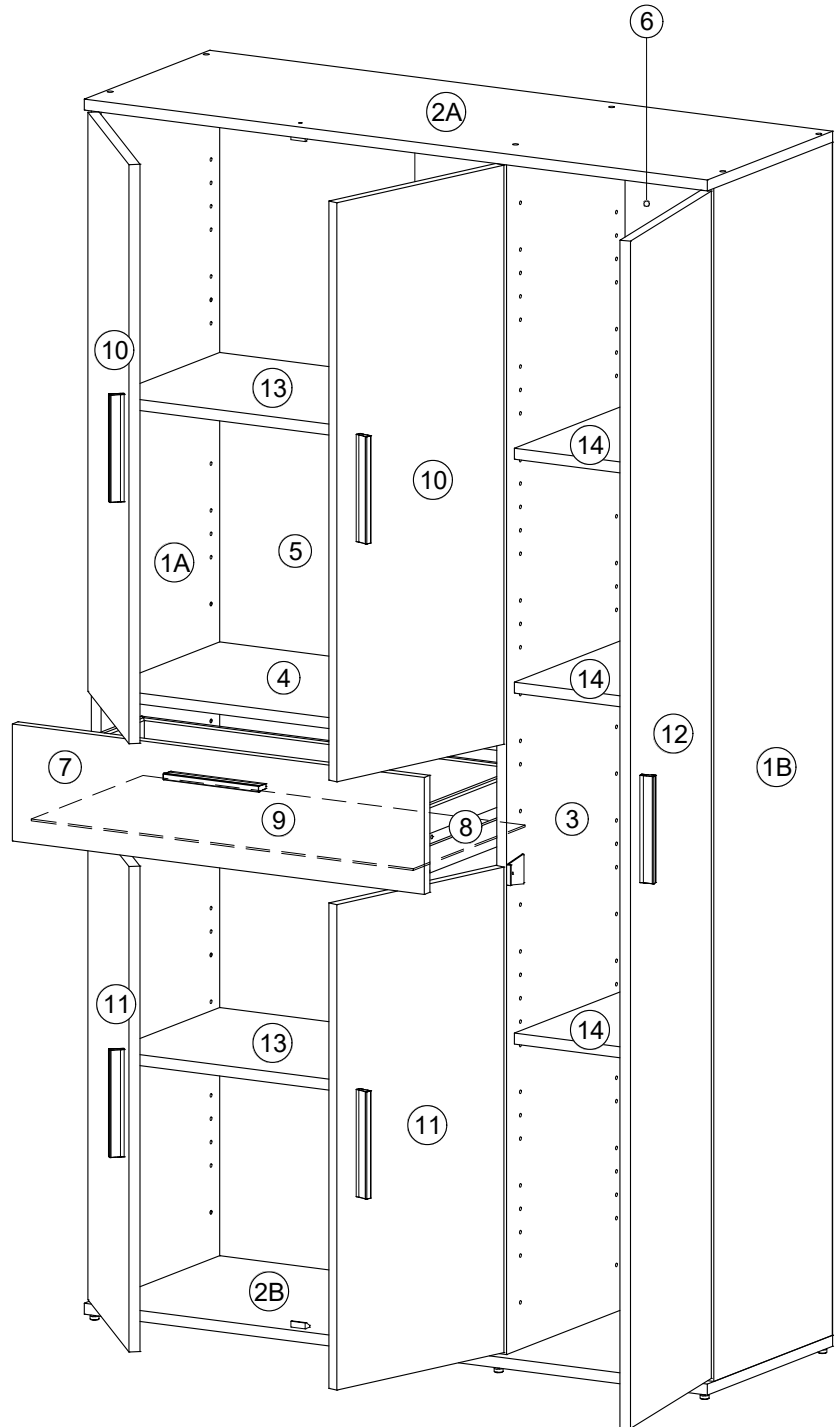


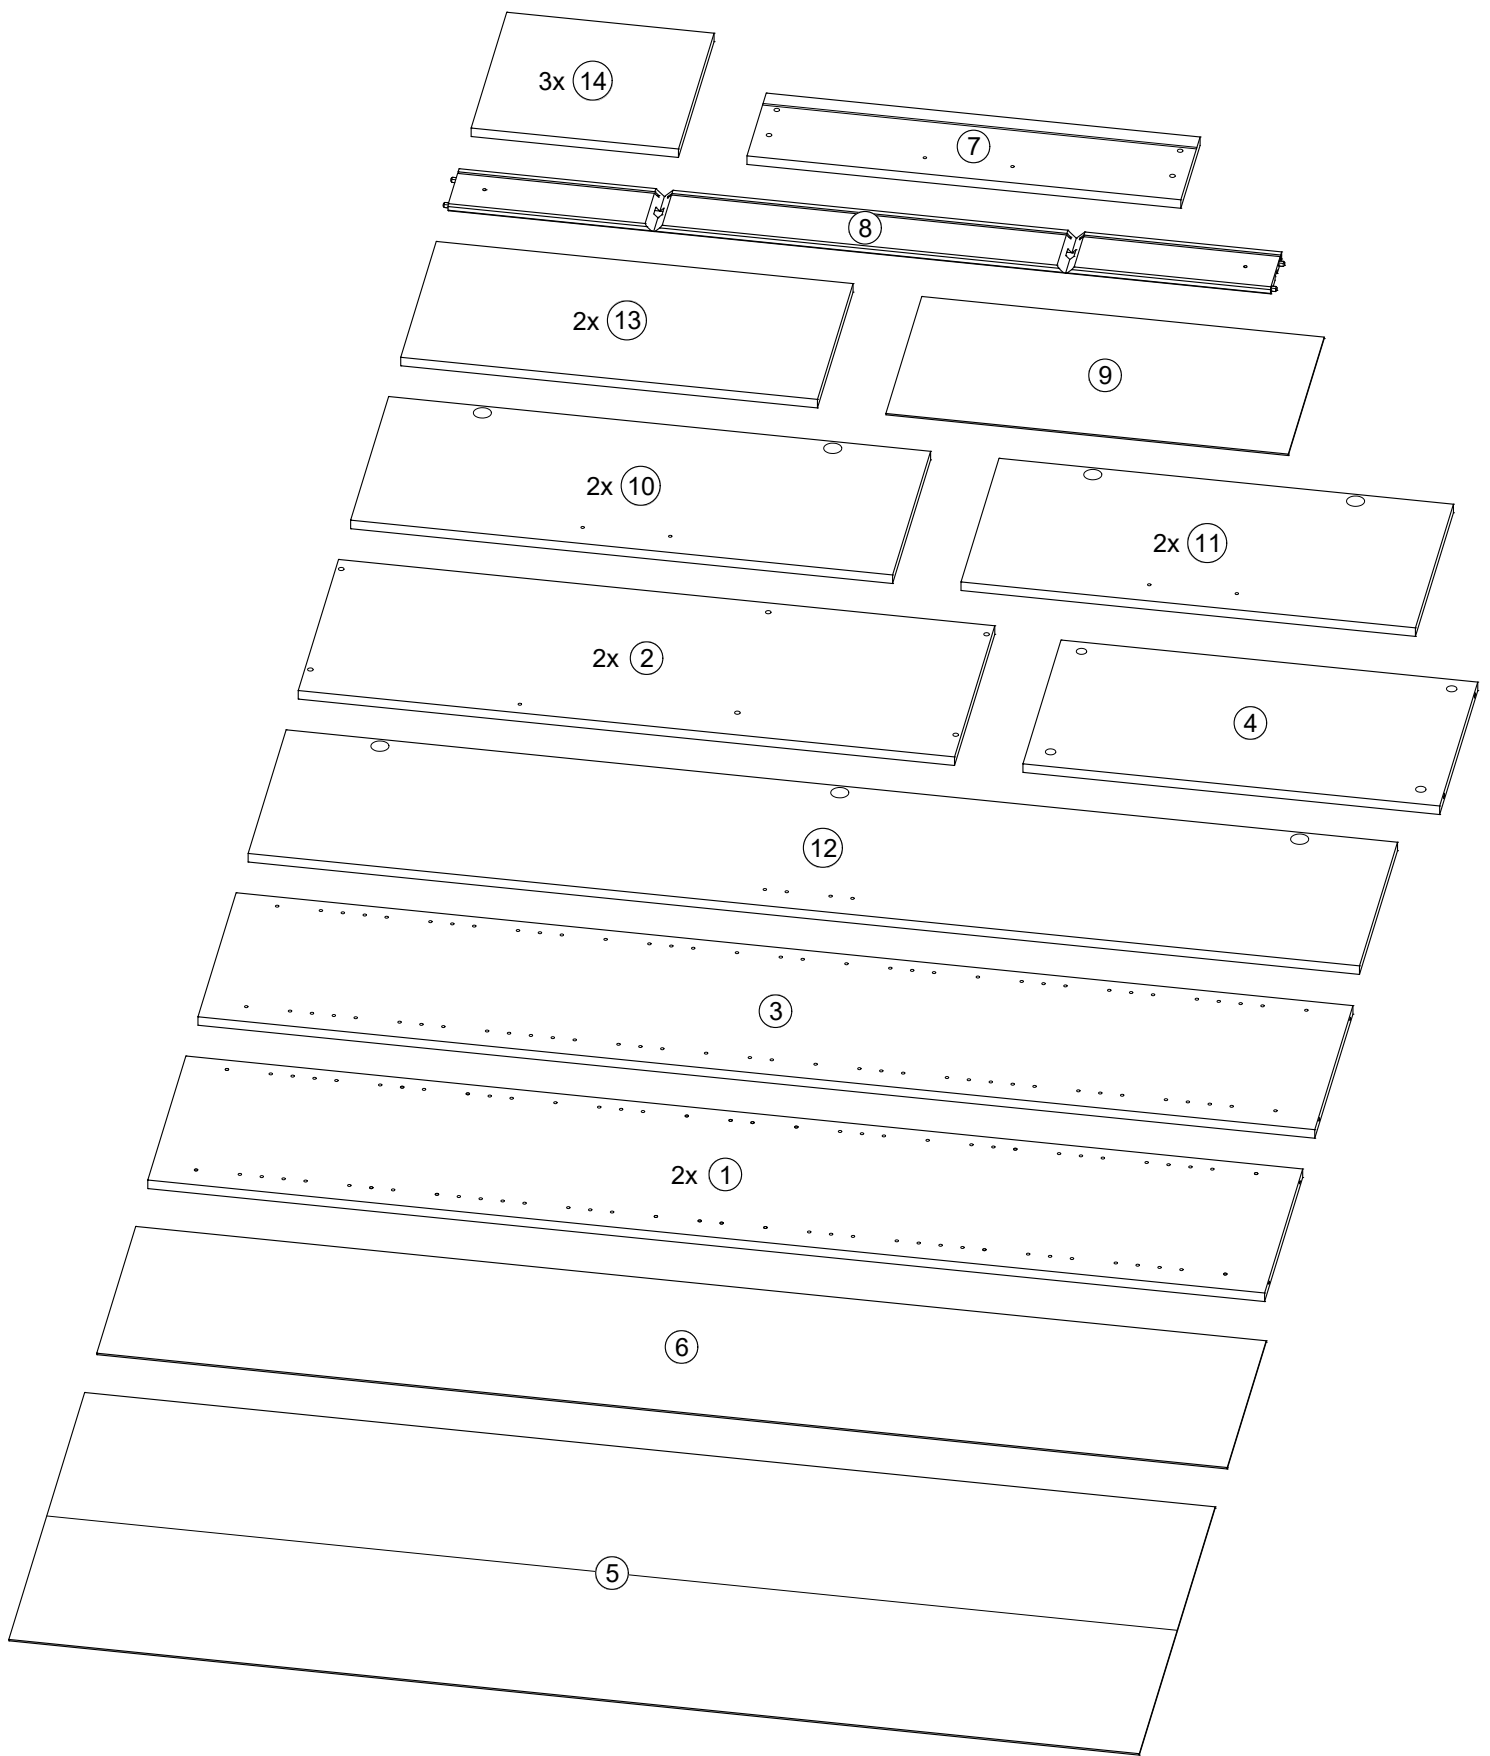



A

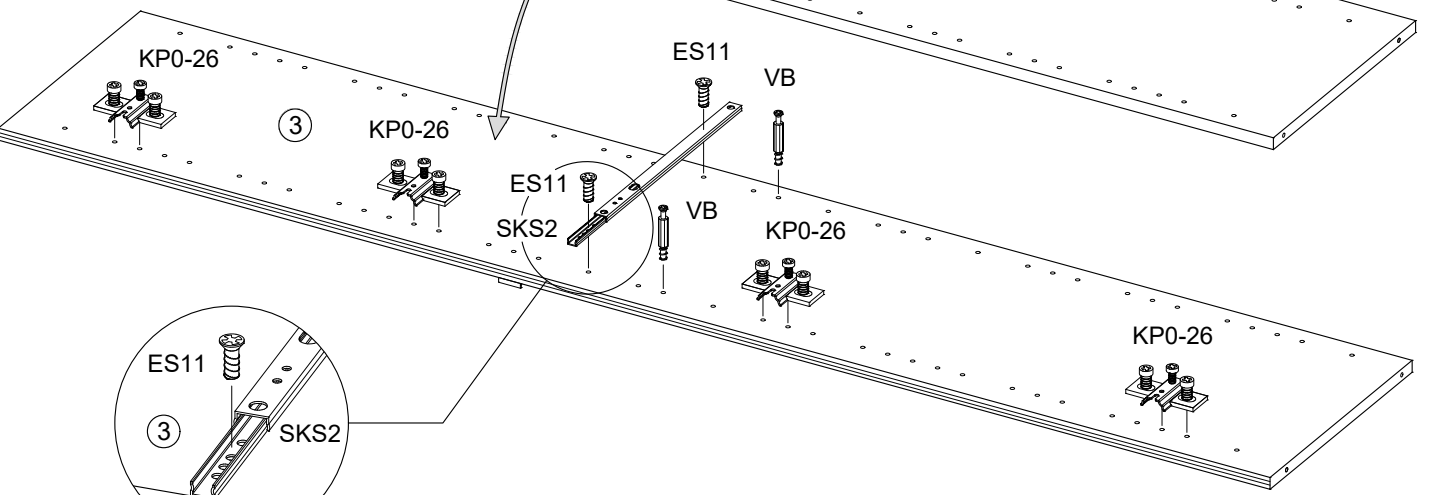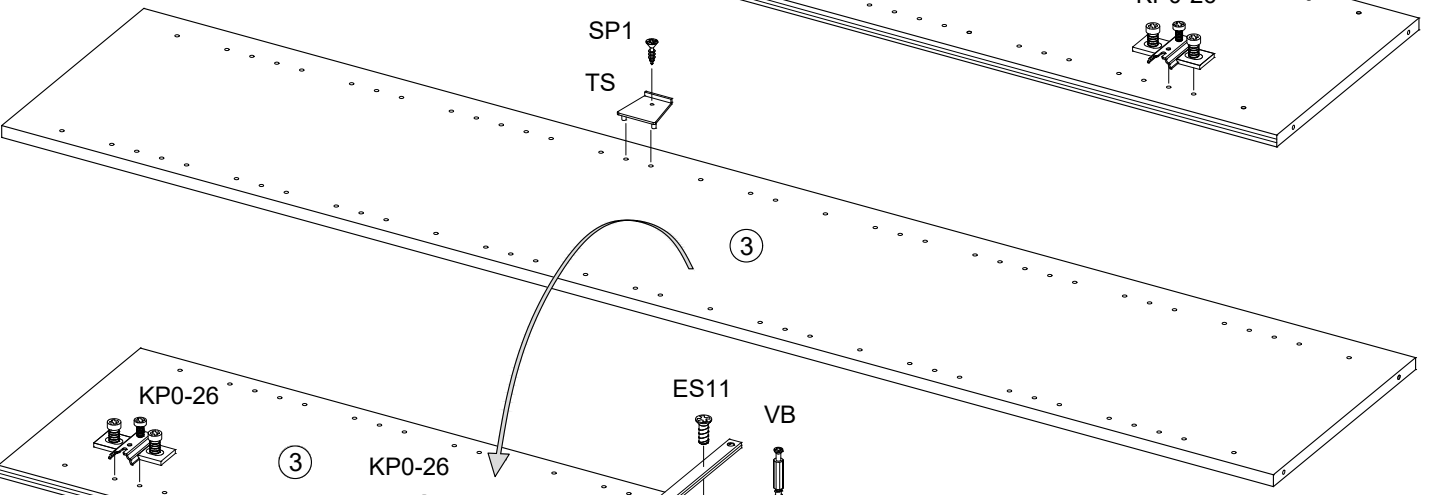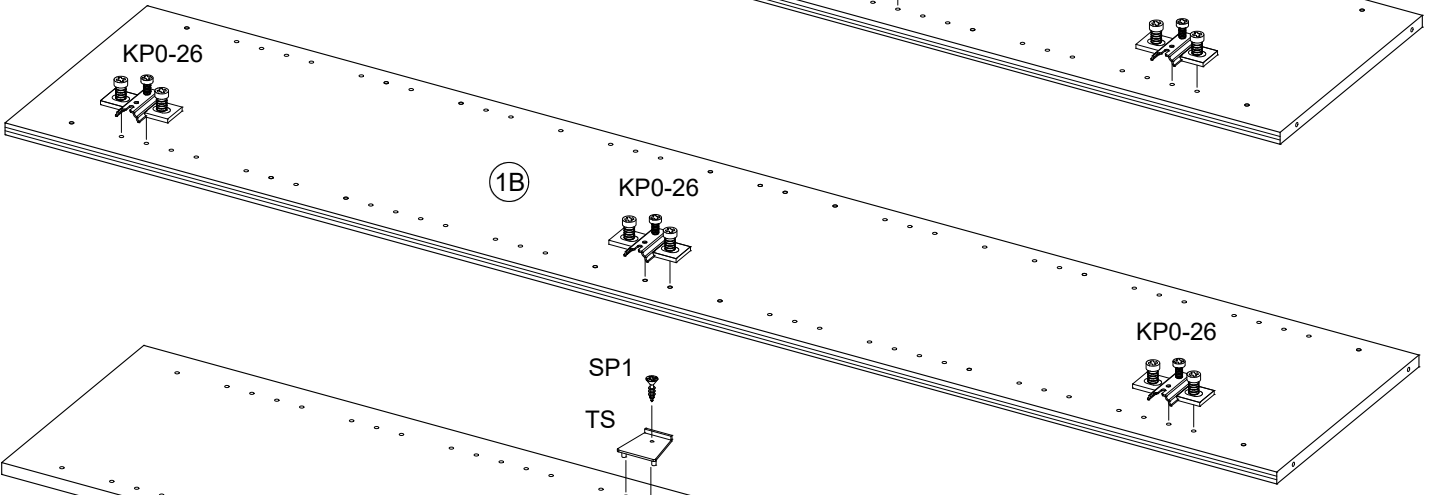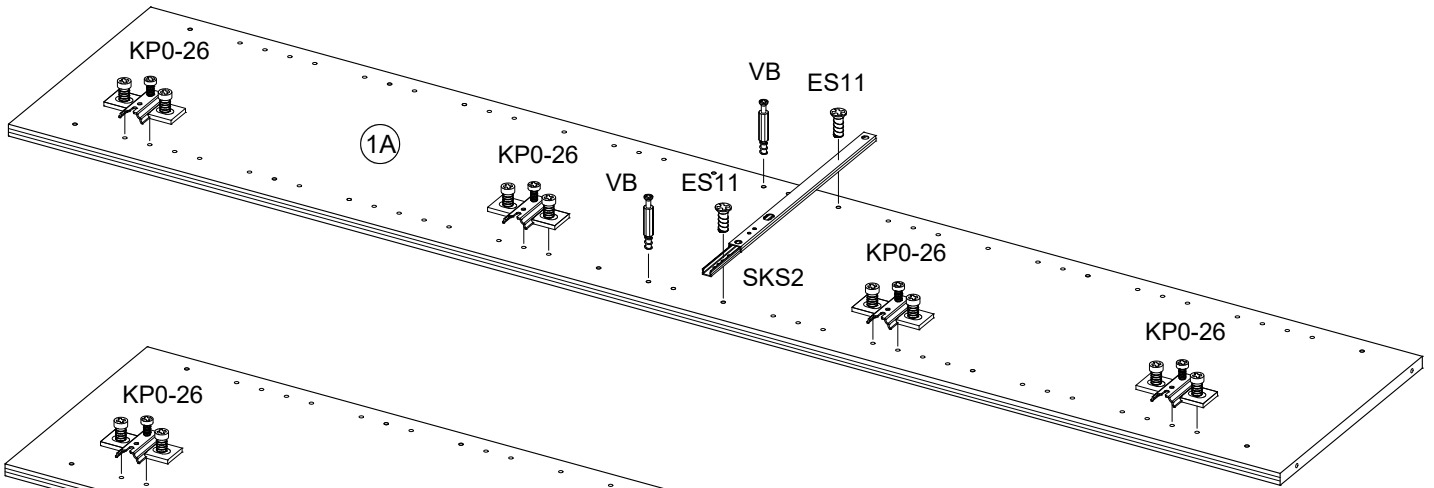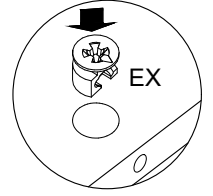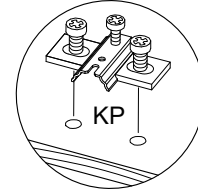
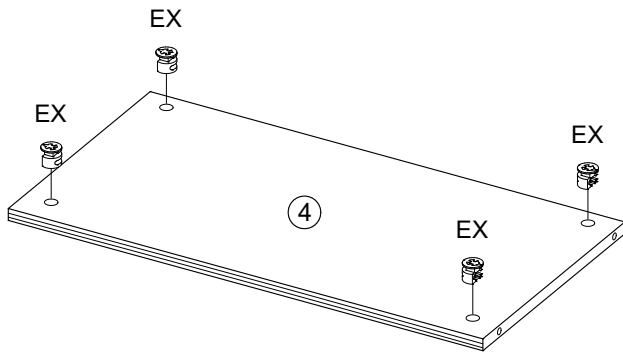


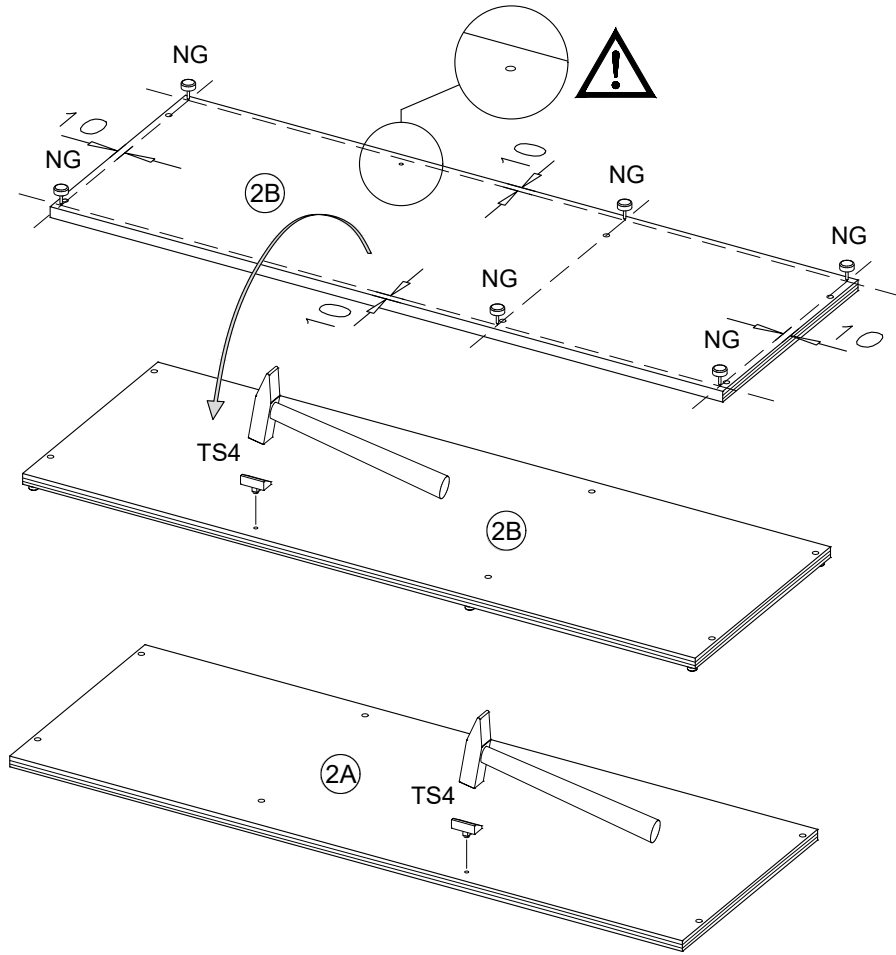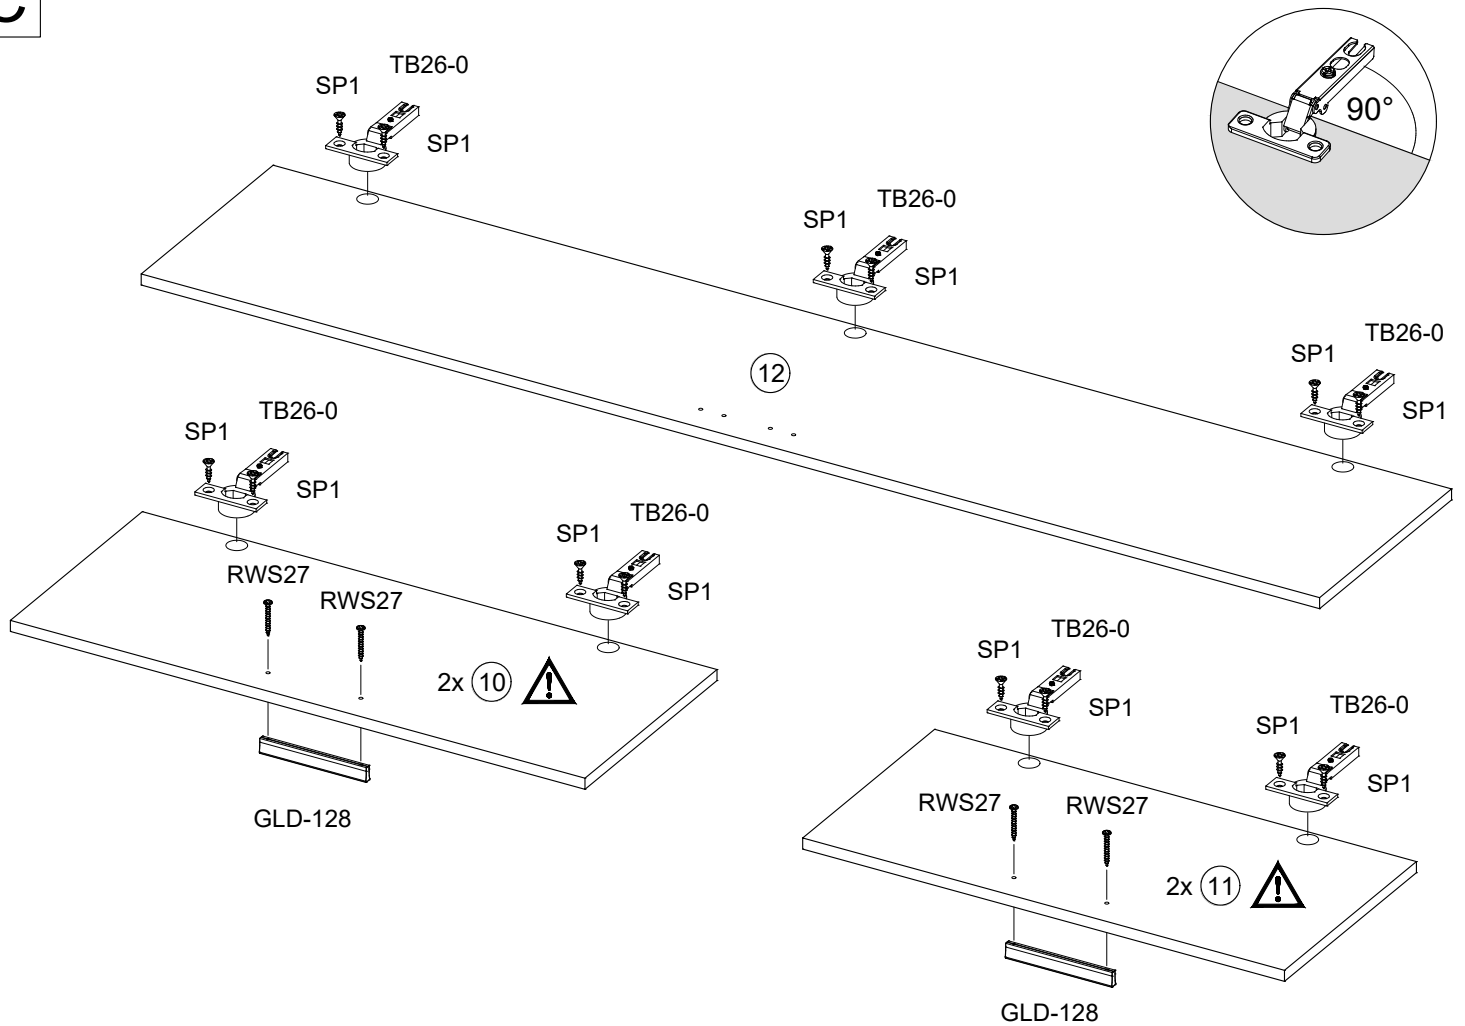B**C**

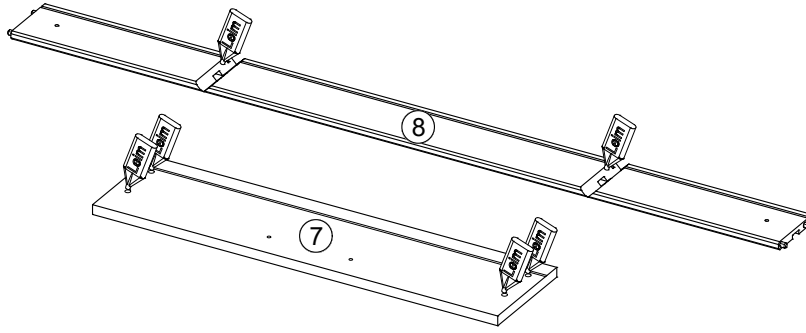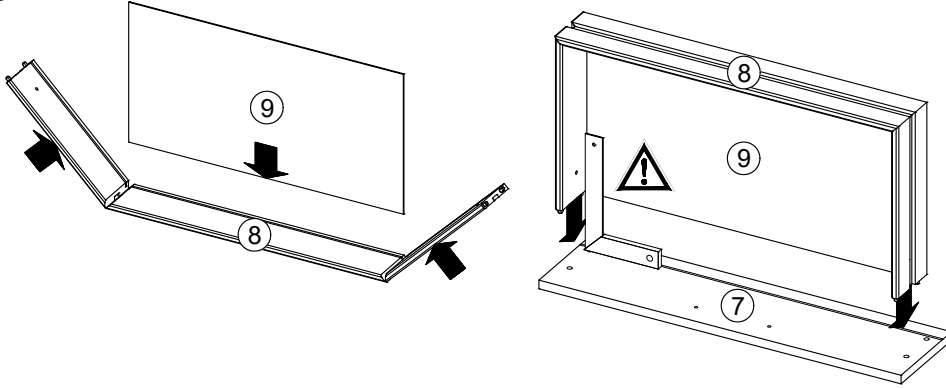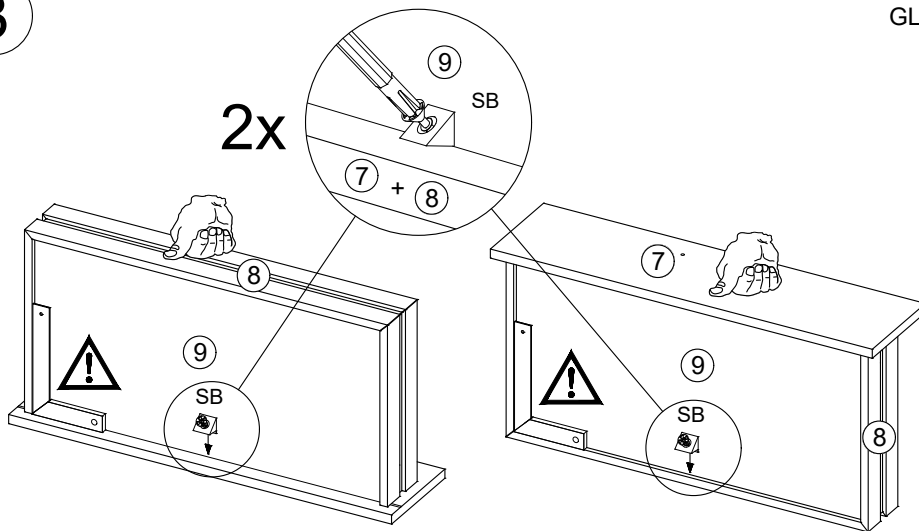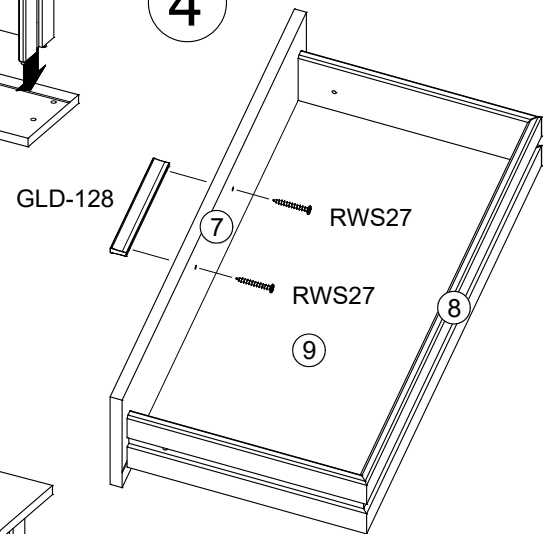D**1****2****3****4**






30 Minuten trocknen lassen
 30 minutes to dry
 30 minutes pour sécher
 30 minuten laten drogen

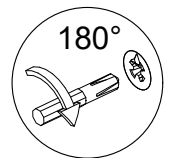
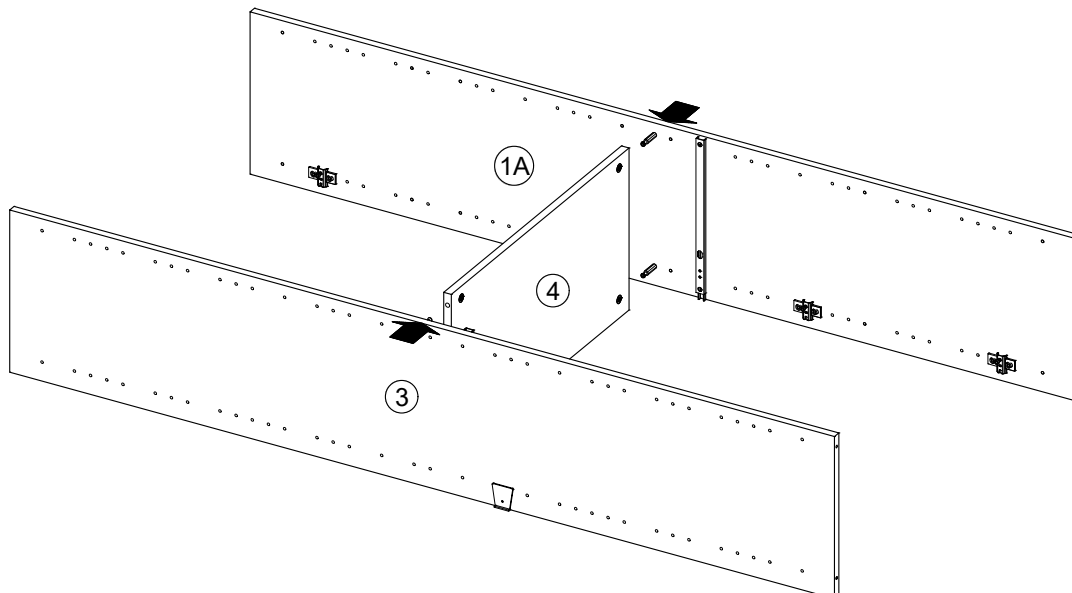
E

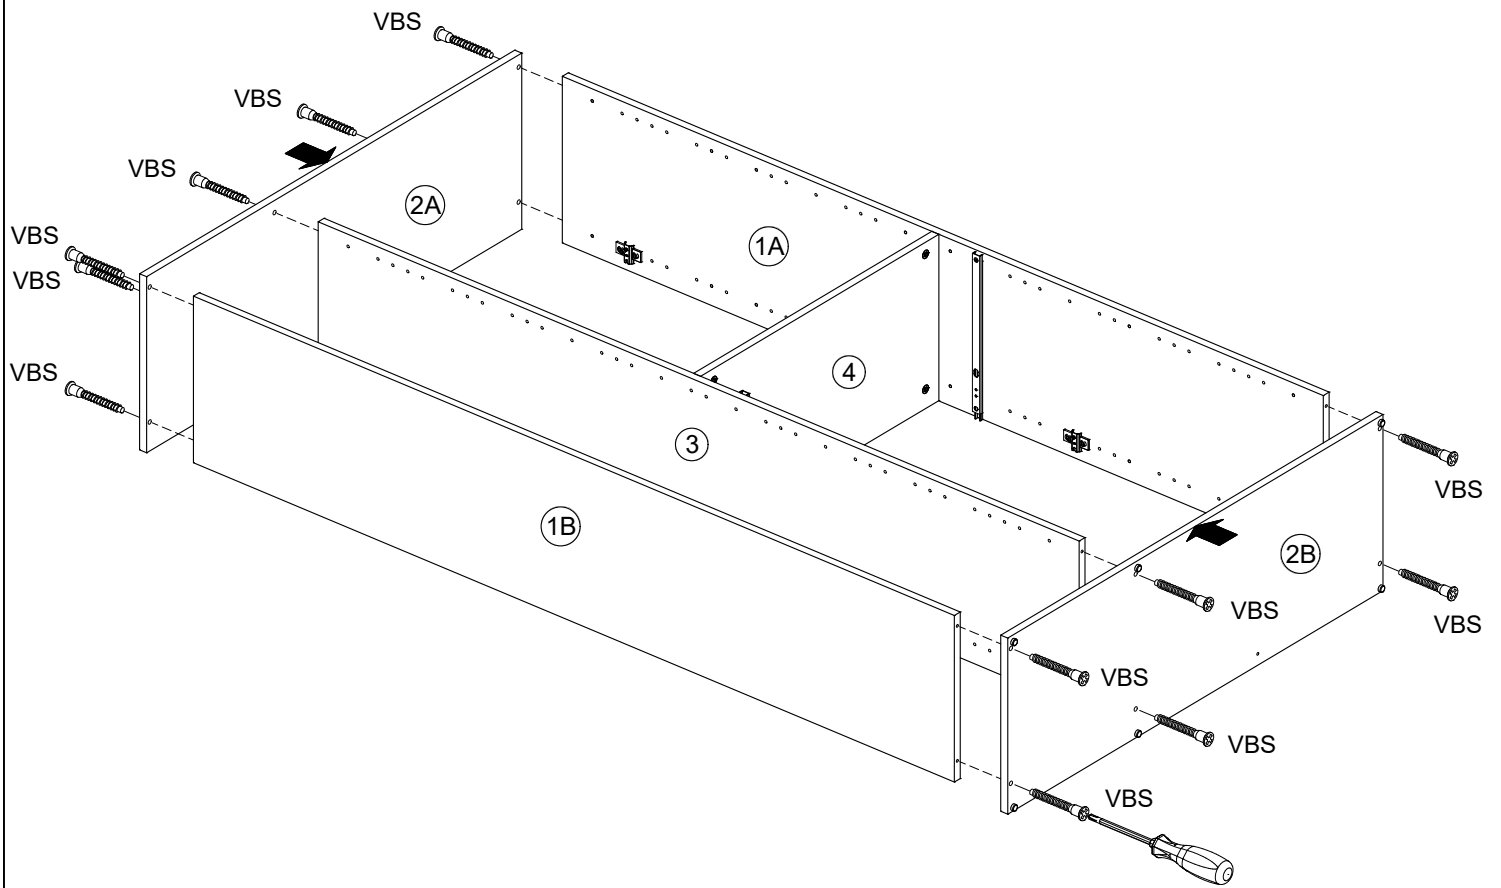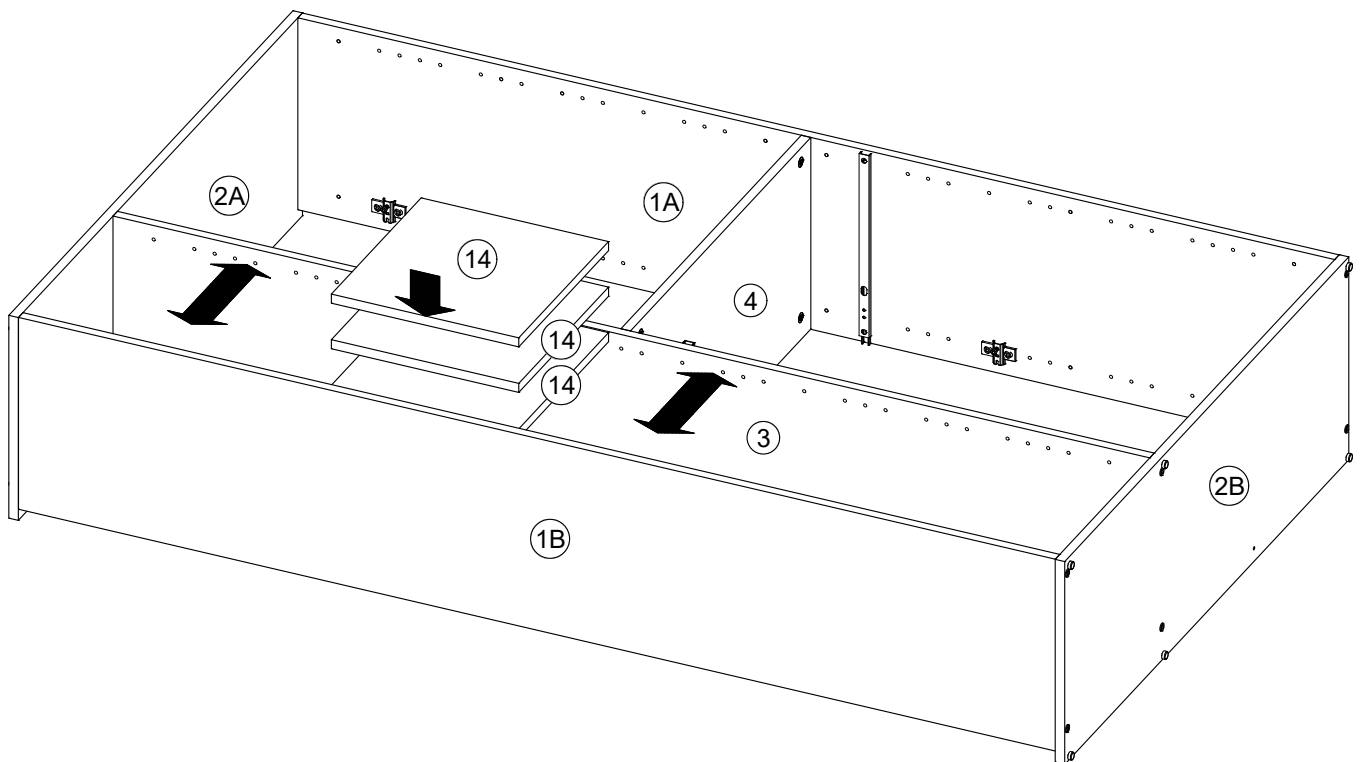F**G**

1

2

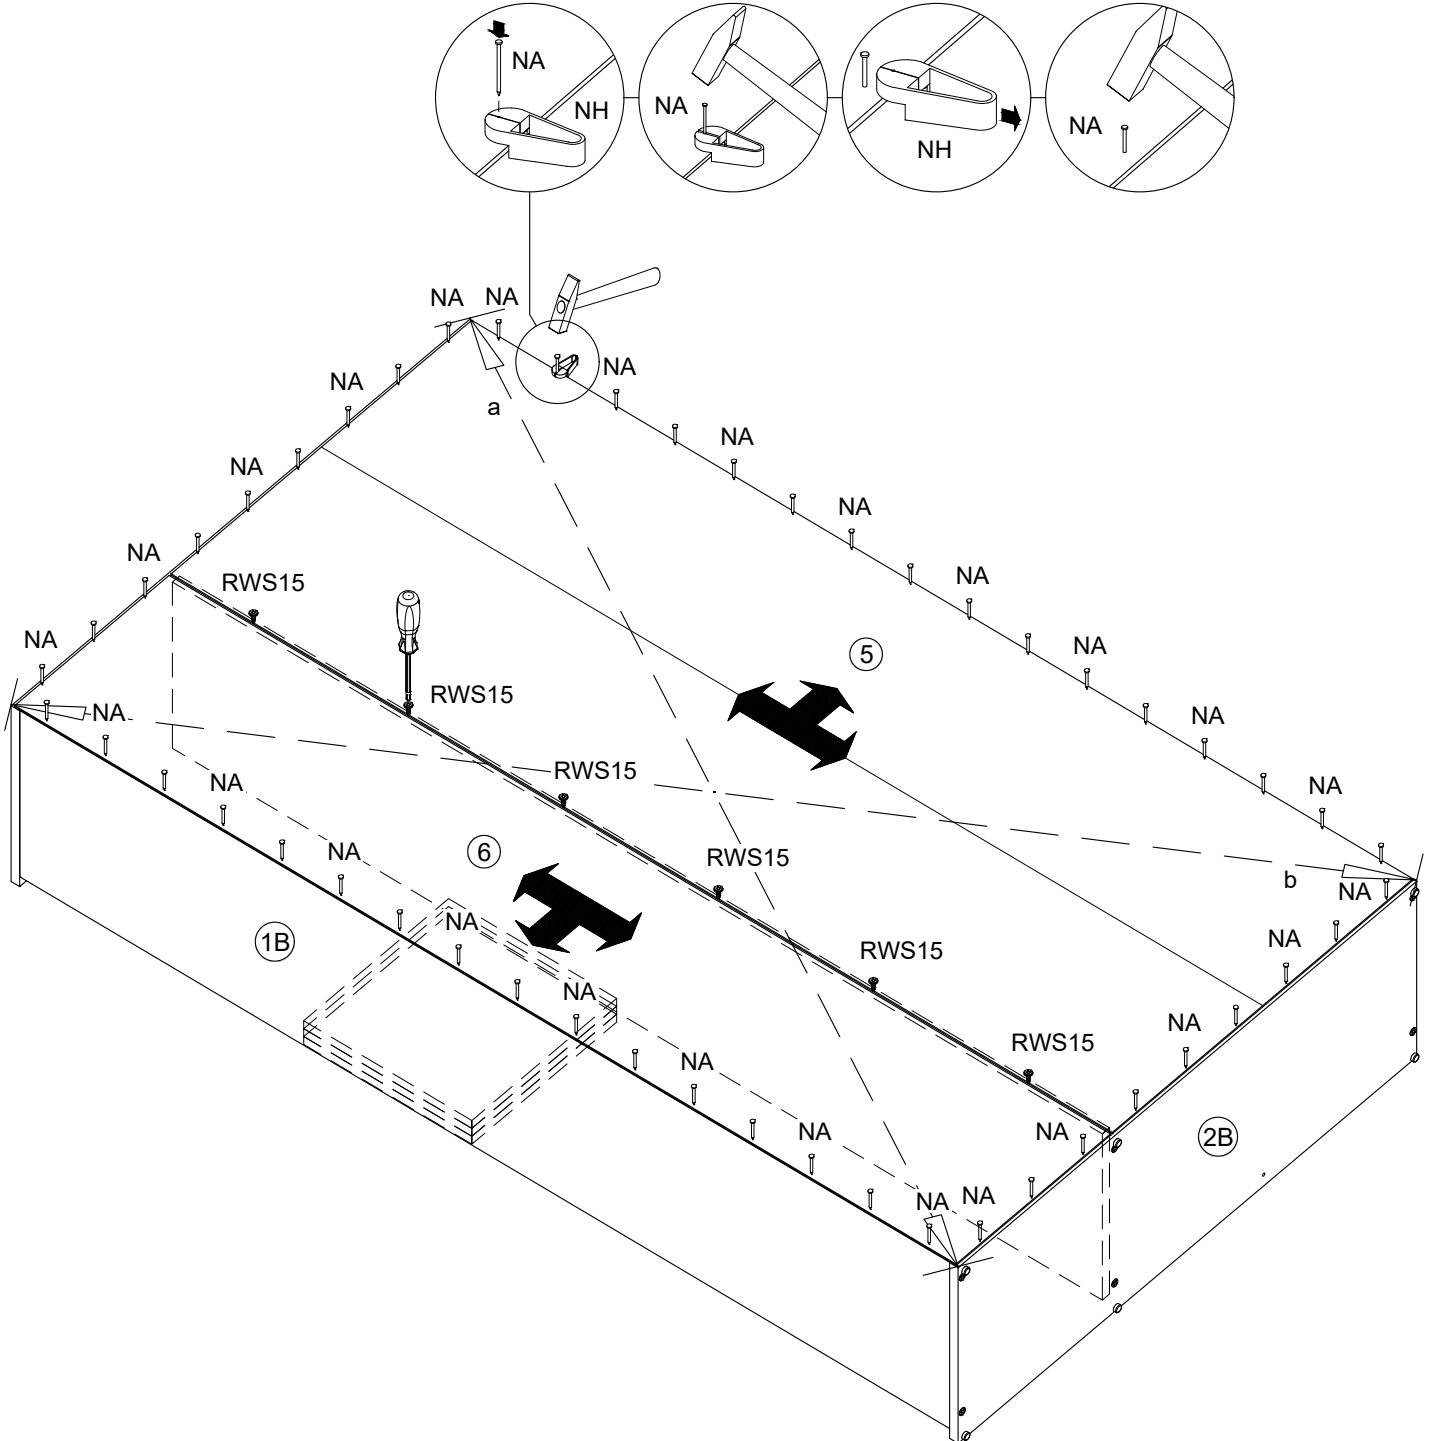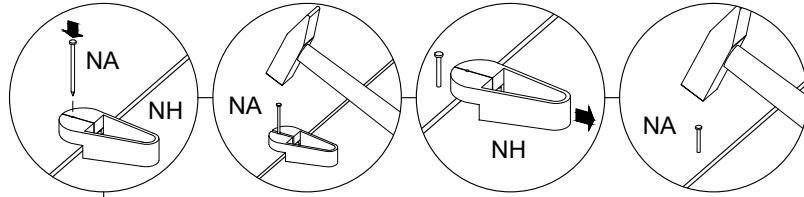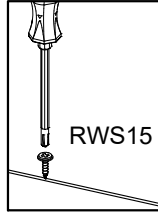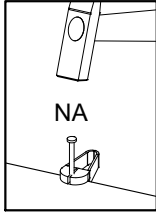


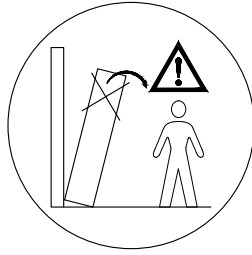
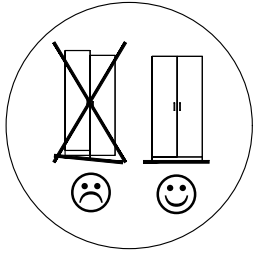


Befestigungsmaterial für die Kippsicherung ist der Wandeingenschaft anzupassen!


Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.

matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur




Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!

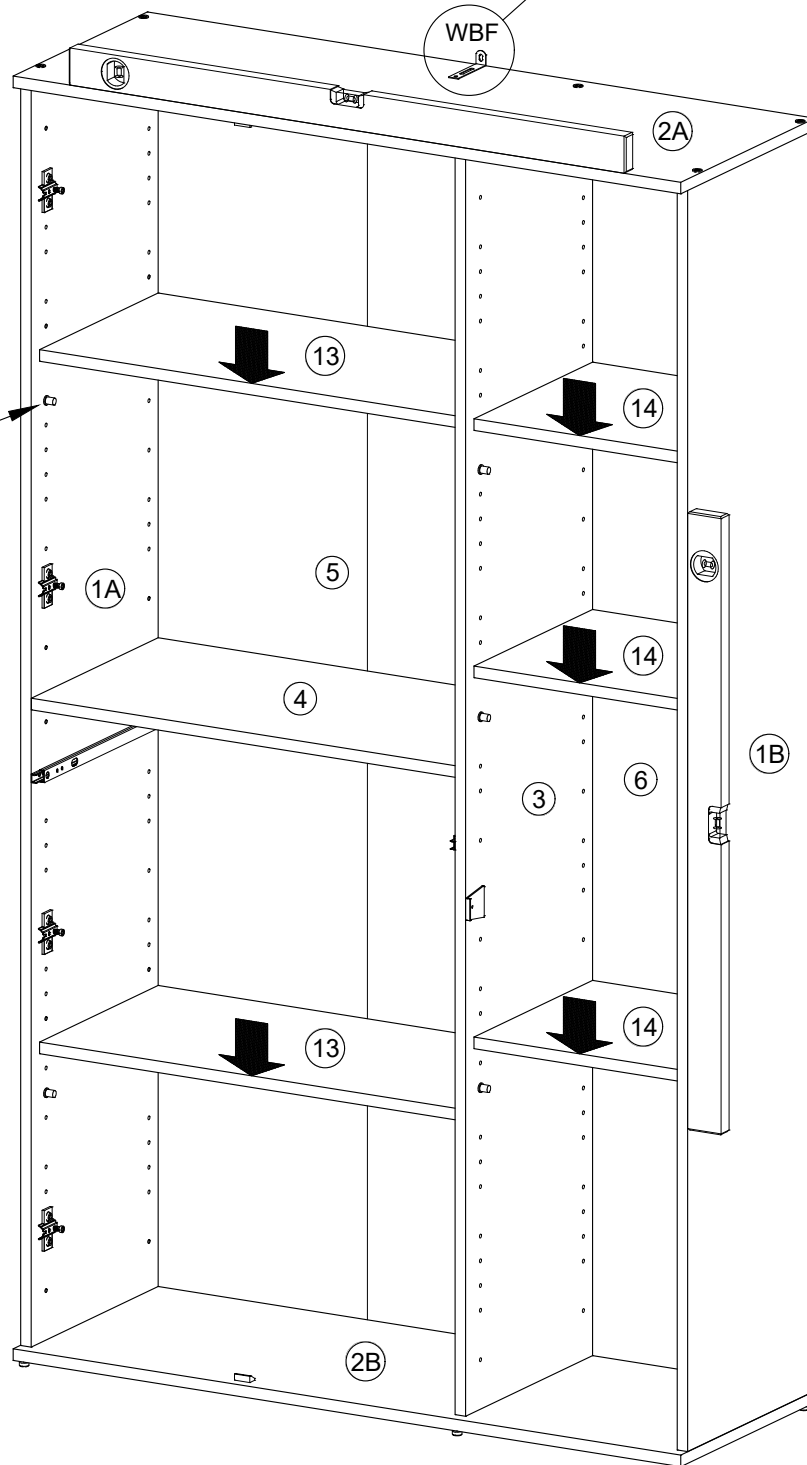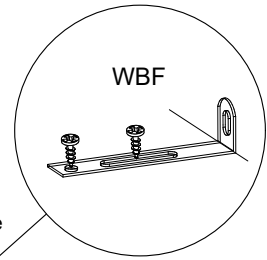


J

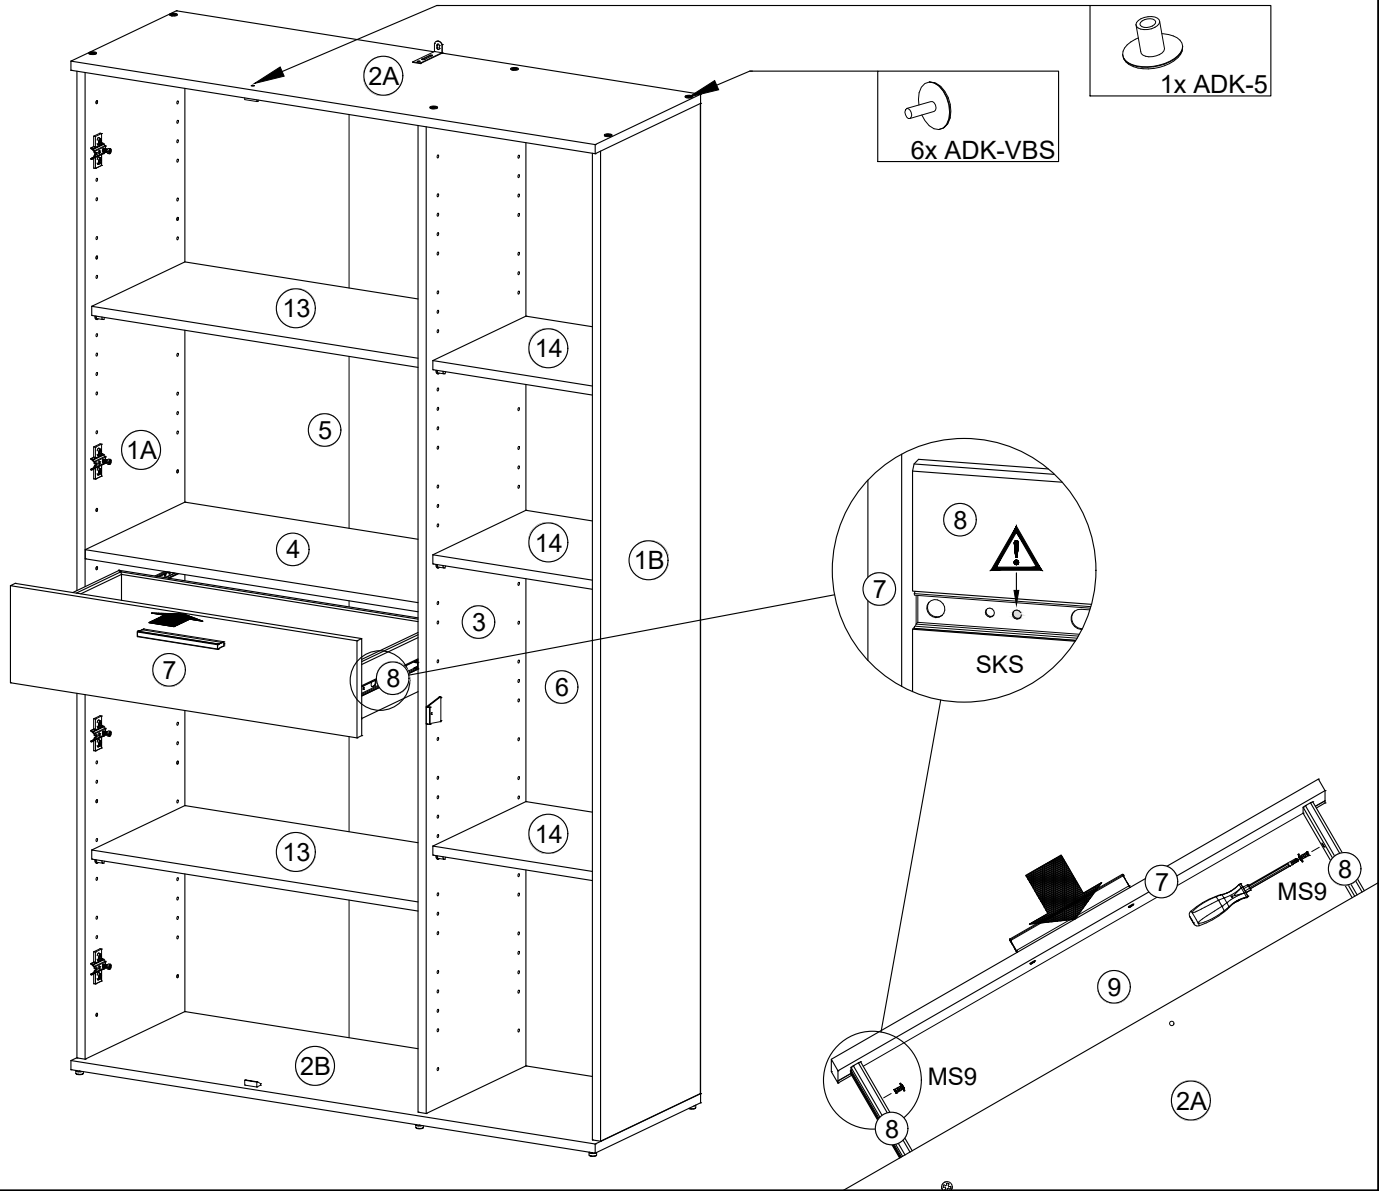

K

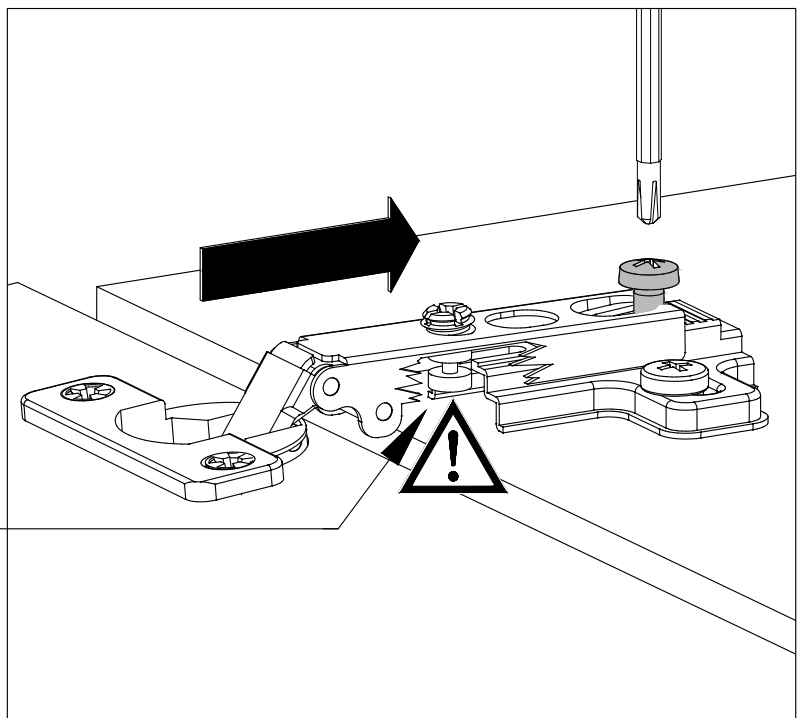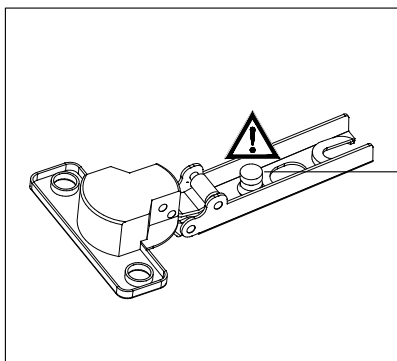

L

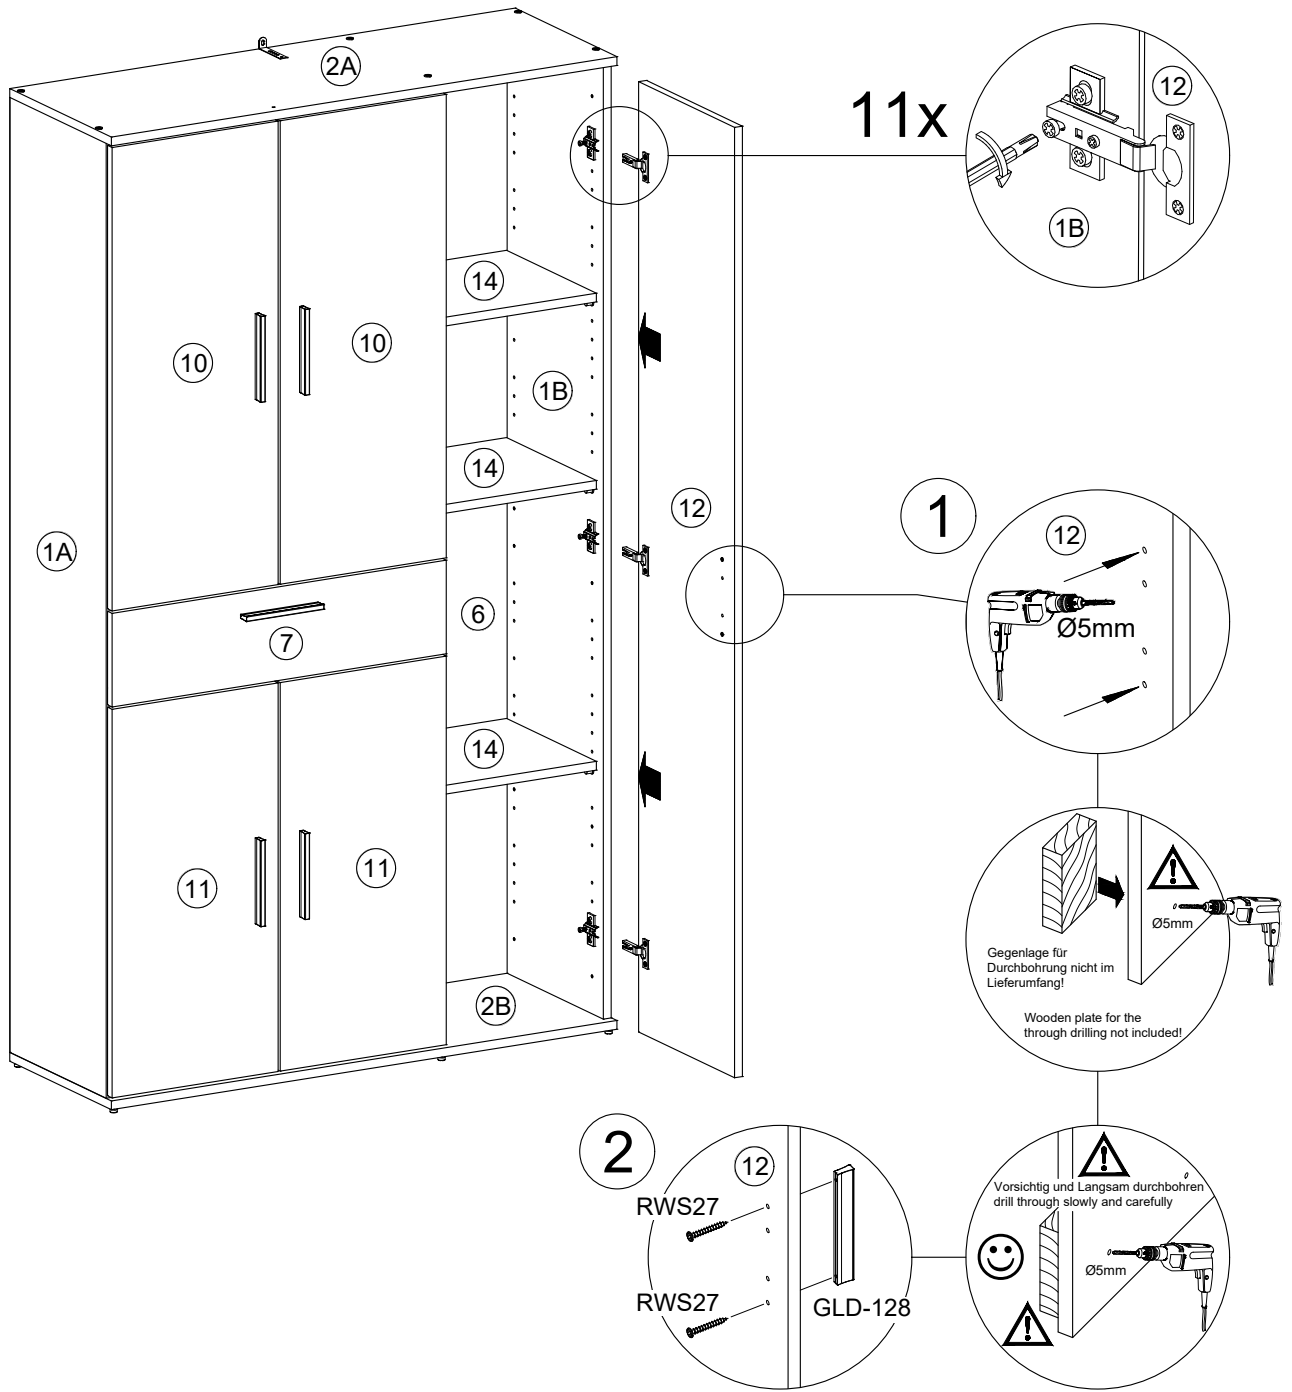

M

